User Manual

3DM2283

3-Phase Digital Stepper Drive







3DM2283 3-phase Digital Stepper Drive

150-220VAC, 0.5-8.2A peak, Auto-configuration, Low Noise

- Anti-Resonance provides optimal torque and nulls mid-range instability
- Motor auto-identification and parameter auto-configuration technology, offers optimal responses with different motors
- Multi-Stepping allows a low resolution step input to produce a higher microstep output, thus offers smoother motor movement
- Microstep resolutions from full-step to51,200.
- Soft-start with no "jump" when powered on
- Supply voltage up to +220 VAC
- Output current programmable, from 0.5A to 11.7A. It can also be set via DIP switches.
- Pulse input frequency up to 200 KHz
- 5V optically isolated input
- Automatic idle-current reduction (Reduction rate can be software configured)
- Suitable for 3-phase motors
- Support PUL/DIR and CW/CCW modes
- Over-voltage, over-current protections

Descriptions

The 3DM2283 is a high voltage, fully digital stepper drive developed with advanced DSP control algorithm based on the latest motion control technology. It has achieved a unique level of system smoothness, providing optimal torque and nulls mid-range instability. Its motor auto-identification and parameter auto-configuration feature offers quick setup to optimal modes with different motors. Compared with traditional analog drives, 3DM2283 can drive a stepper motor at much lower noise, lower heating, and smoother movement. Its unique features make 3DM2283 an ideal choice for high requirement applications.

Applications

Suitable for a wide range of stepper motors, from NEMA size 34 to 51. It can be used in various applications such as laser cutters, laser markers, high precision X-Y tables, labeling machines, CNC router, etc. Its unique features make the 3DM2283 an ideal choice for applications that require both low-speed smoothness and high speed performances



Specifications


Electrical Specifications

| Parameter | Min | Typical | Max | Unit |
|-----------------------|-----|---------|-----|-----------|
| Input Voltage | 150 | 220 | 240 | VAC |
| Pulse Input Frequency | 0 | - | 200 | kHz |
| Logic Signal Current | 7 | 10 | 16 | mA |
| Isolation Resistance | 500 | - | - | $M\Omega$ |

Operating Environment

| Cooling | Natural Cooling or Forced cooling | | | | |
|-------------------------|-----------------------------------|---|--|--|--|
| | Environment | Avoid dust, oil fog and corrosive gases | | | |
| | Storage Temperature | -20°C − 65°C (-4°F − 149°F) | | | |
| Operating Environment | Ambient Temperature | $0^{\circ}\text{C} - 50^{\circ}\text{C} (32^{\circ}\text{F} - 122^{\circ}\text{F})$ | | | |
| operating any normality | Humidity | 40%RH — 90%RH | | | |
| | Operating Temperature (Heat Sink) | 70°C (158°F) Max | | | |
| Storage Temperature | -20°C − 65°C (-4°F − 149°F) | | | | |
| Weight | 1.3Kg (2.87lbs) | | | | |


Mechanical Specifications

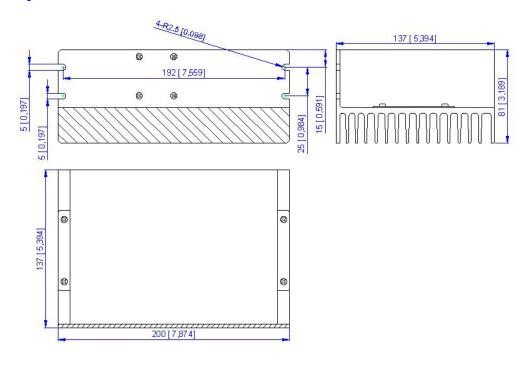



Protection Indications

The green indicator turns on at power-up. When drive protection is activated, the red LED blinks periodicity to indicate the error type

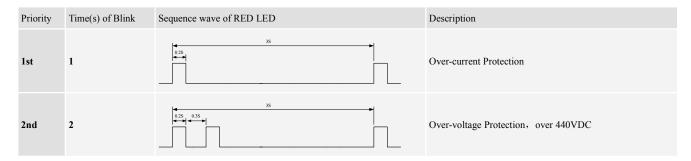

Pin Assignment

The 3DM2283 has one barrier strip connector for power and motor connections and one screw terminal for control signal connections.

| | Power and Motor Connector | | | | | | |
|-----|---------------------------|-----|---|--|--|--|--|
| Pin | Name | I/O | Description | | | | |
| 1 | PE | - | Recommend connect this port to the ground for better safety. | | | | |
| 2 | L | I | Power supply inputs. If AC input, recommend use isolation transformers with | | | | |
| 3 | N | I | theoretical output voltage of 150-220VAC. | | | | |
| 4 | NC | - | No Connection | | | | |
| 5 | U | О | Motor Phase U | | | | |
| 6 | V | O | Motor Phase V | | | | |
| 7 | W | O | Motor Phase W | | | | |

Pin Assignment (Continued)

| | Control Signal Connector | | | | | |
|----|--------------------------|-----|--|--|--|--|
| in | Name | I/O | Description | | | |
| | PUL+ | I | <u>Pulse Signal</u> : In single pulse (pulse/direction) mode, this input represents pulse signal, each rising or falling edge active (software configurable, see DM drives software operational manual for the detail); In double pulse mode (software configurable), this input represents | | | |
| , | PUL- | I | clockwise (CW) pulse, active both at high level and low level. 4-5V when PUL-HIGH, 0-0.5V when PUL-LOW. For reliable response, pulse width should be longer than 2.5µs. Series connect resistors for current-limiting when +12V or +24V used. The same as DIR and ENA signal. | | | |
| | DIR+ | I | <u>Direction Signal</u> : In single-pulse mode, this signal has low/high voltage levels, representing two directions of motor rotation. In double-pulse mode (software configurable), this signal is counter-clock (CCW) pulse, active both at high level and low level. For reliable motion | | | |



| | DIR- | I | response, DIR signal should be ahead of PUL signal by 5µs at least. 4-5V when DIR-HIGH, 0-0.5V when DIR-LOW. Please note that rotation direction is also related to motor-driver wiring match. Exchanging the connection of two wires for a coil to the driver will reverse motion direction. The direction signal's polarity is software configurable. |
|---|--------|---|---|
| | ENA+ | I | Enable signal: This signal is used for enabling/disabling the drive. In default, high level (NPN control signal) for enabling the driver and low level for disabling the driver. Usually |
| | ENA- | I | left UNCONNECTED (ENABLED). Please note that PNP and Differential control signals are on the contrary, namely Low level for enabling. The active level of ENA signal is software configurable. |
| | FAULT+ | О | <u>Fault Signal:</u> OC output signal, active when one of the following protection is activated: over-voltage, over current, low voltage, phase error and over-temperature. This port can |
| ; | FAULT- | О | sink or source 20mA current at 24V. In default, the resistance between FAULT+ and FAULT- is high impedance in normal operation and become low when 3DM2283 goes into error. |

RS232 Communication Port

The RS232 communication port is used to configure the 3DM2283's peak current, microstep, active level, current loop parameters and anti-resonance parameters. See DM driver's software operational manual for more information.

| | RS232 Communication Port | | | | |
|-----|--------------------------|-----|-----------------|--|--|
| Pin | Name | I/O | Description | | |
| 1 | NC | - | Not connected. | | |
| 2 | +5V | О | Not connected. | | |
| 3 | TxD | O | RS232 transmit. | | |
| 4 | GND | GND | Ground. | | |
| 5 | RxD | I | RS232 receive. | | |
| 6 | NC | - | Not connected. | | |

DIP Switch Settings

Dynamic Current

| Peak | RMS | SW1 | SW2 | SW3 |
|---------|---------|-----|-----|-----|
| Default | Default | OFF | OFF | OFF |
| 3.1A | 2.2A | ON | OFF | OFF |
| 4.5A | 3.2A | OFF | ON | OFF |
| 5.9A | 4.2A | ON | ON | OFF |
| 7.3A | 5.2A | OFF | OFF | ON |
| 8.9A | 6.3A | ON | OFF | ON |
| 10.1A | 7.2A | OFF | ON | ON |
| 11.7A | 8.3A | ON | ON | ON |



Note: Due to motor inductance, the actual current in the coil may be smaller than the dynamic current setting, particularly under high speed condition.

Idle-Current

SW4 determines whether current-reduction is performed when there is no pulse applied to 3DM2283...

| | OFF | ON |
|-----|--|---|
| | Motor current reduces automatically when | Motor current is the same as the dynamic |
| SW4 | there is no pulse applied to 3DM2283. | current when there is no pulse applied to |
| | | 3DM2283. |

Microstep Resolution

| Steps/Revolution | SW5 | SW6 | SW7 | SW8 |
|------------------|-----|-----|-----|-----|
| 200 | ON | ON | ON | ON |
| 400 | OFF | ON | ON | ON |
| 1600 | ON | OFF | ON | ON |
| 3200 | OFF | OFF | ON | ON |
| 6400 | ON | ON | OFF | ON |
| 12800 | OFF | ON | OFF | ON |
| 25600 | ON | OFF | OFF | ON |
| 500 | OFF | OFF | OFF | ON |
| 1000 | ON | ON | ON | OFF |
| 1200 | OFF | ON | ON | OFF |
| 2000 | ON | OFF | ON | OFF |
| 4000 | OFF | OFF | ON | OFF |
| 5000 | ON | ON | OFF | OFF |
| 6000 | OFF | ON | OFF | OFF |
| 8000 | ON | OFF | OFF | OFF |
| 10000 | OFF | OFF | OFF | OFF |

Auto-Configuration

Switch **SW4** two times in two seconds will activate parameter Auto-configuration for 3DM2283's current loop. That is, OFF-ON-OFF or ON-OFF-ON. During Auto-configuration, motor parameters are identified and 3DM2283's current loop parameters are calculated automatically. The motor shaft will vibrate a little during the process of Auto-configuration which takes about 1 to 3 seconds.



Typical Connections

NPN Control Signal

